

CODING A REMOTE CONTROL

CODING REMOTE FROM THE OPENER



tip

The opener can only be operated from remote controllers that have been programmed into its memory.

STEP ONE



Press and release



LED will light up

STEP TWO



Press and **HOLD**

STEP THREE



The LED will flash when coded



RELEASE



Press to test

CHANGING A BATTERY



tip

Battery Type: 1 x 12V A23.

STEP ONE



HOLD

Check Light Status Table



Light Status

Battery

Solid

OK

Flashing

Replace

No light

Replace

STEP TWO



Slide back cover down to expose battery

STEP THREE



Replace battery and slide cover back into position



WARNING!: The battery is hazardous and must be kept out of reach of children. The battery can cause severe or fatal injuries if swallowed or placed inside any part of the body. If you suspect the battery has been swallowed or placed inside any part of the body, SEEK IMMEDIATE medical attention.