

CODING A REMOTE CONTROL INTO POWERDRIVE / ROLL-A-PRO



The opener can only be operated from remote controllers that have been programmed into its memory. Up to 64 remotes (8 for Roll-A-Pro) can be programmed.

CODING REMOTE FROM THE OPENER

STEP ONE



Switch power on

STEP TWO



remove controls cover

STEP THREE



Press and release



HOLD for 3 sec

RELEASE

HOLD for 3 sec

RELEASE

STEP FOUR



Press to test

REMOTELY CODING A REMOTE CONTROL



Remotely coding works when you have a pre-coded remote control and are in range of the opener.

STEP ONE



Take a pre-coded remote and press the button to duplicate

STEP TWO



Use a pen,

HOLD for 2 sec

the middle button through the coding hole

STEP THREE

Opener flashes & beeps



Take new remote

HOLD for 3 sec

RELEASE

HOLD for 3 sec

RELEASE

STEP FIVE

Opener stops flashing & beeping



Press to test

CHANGING A BATTERY



Battery Type: 1 x CR2032.

STEP ONE



Check Light Status



HOLD


Light Status	Battery
Solid	OK
Flashing	Replace
No light	Replace

STEP TWO



Use screwdriver to remove screws and open

STEP THREE

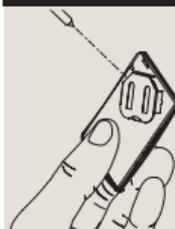

Use non-metallic object to push out.



WARNING!: The battery is hazardous and must be kept out of reach of children. The battery can cause severe or fatal injuries within 2 hours or less if swallowed or placed inside any part of the body. If you suspect the battery has been swallowed or placed inside any part of the body, **SEEK IMMEDIATE** medical attention.