

CODING A REMOTE CONTROL INTO SMART PRO, SMART OR SECURE

CODING REMOTE FROM THE OPENER



The opener can only be operated from remote controllers that have been programmed into its memory. Up to 64 remotes can be programmed.

STEP ONE



Switch power on and remove controls cover

STEP TWO



Press repeatedly



till remote LED lit

STEP THREE



HOLD

Opener flashes & beeps



HOLD for 3 sec

RELEASE

HOLD for 3 sec

Release both buttons

STEP FOUR



OFF

Then replace controls cover

STEP FIVE



Press to test

REMOTELY CODING A REMOTE CONTROL



Remotely coding works when you have a pre-coded remote control and are in range of the opener.

STEP ONE



Take a pre-coded remote and press the button to duplicate

STEP TWO



Use a pen,

HOLD for 2 sec

the middle button through the coding hole

STEP THREE

Opener flashes & beeps



Take new remote

HOLD for 3 sec

RELEASE

HOLD for 3 sec

RELEASE

STEP FIVE

Opener stops flashing & beeping



Press to test

CHANGING A BATTERY



Battery Type: 1 x CR2032.

STEP ONE



HOLD

Check Light Status Table



Light Status

Battery

Solid

OK

Flashing

Replace

No light

Replace

STEP TWO



Use screwdriver to remove screws and open

STEP THREE



Use non-metallic object to push out.



WARNING !: The battery is hazardous and must be kept out of reach of children. The battery can cause severe or fatal injuries within 2 hours or less if swallowed or placed inside any part of the body. If you suspect the battery has been swallowed or placed inside any part of the body, **SEEK IMMEDIATE** medical attention.