

CHAMBERLAIN®

Wireless Keyless Entry with rolling code Model 8747AML

FEATURES

For use with Chamberlain, Homentry, Merlin and Motorlift sectional and roller garage door openers.

PIN Storage: Up to 10,000 possible combinations.

PIN can be easily changed if desired.


Rolling Code: Whilst your PIN code remains constant the 8747AML randomly generates encrypted code each time you use it, meaning your code is secure and can not be captured.

Operation: To transmit your PIN enter the numbers on the backlit keypad followed by the ENTER Key. The Door will open, If you enter the wrong PIN, press ENTER and then re-enter your correct PIN. Once you have entered a valid PIN the unit will remain active for 15 seconds. During this time you can use the ENTER key to close your door. The ENTER key can also be used to stop the door whilst it is opening or closing.

One Button Close: Opener can be closed by pressing only the ENTER button if the one button close feature has been activated. This feature has been activated at the factory. To activate or deactivate this feature press and hold buttons 1 and 9 for 10 seconds. The keypad will blink twice when the one button close is active. The keypad will blink four times when one button close is deactivated.

USING THE "LEARN" BUTTON



NOTE: Sectional garage door opener shown, your opener may differ. Please refer to your owners manual for instructions.

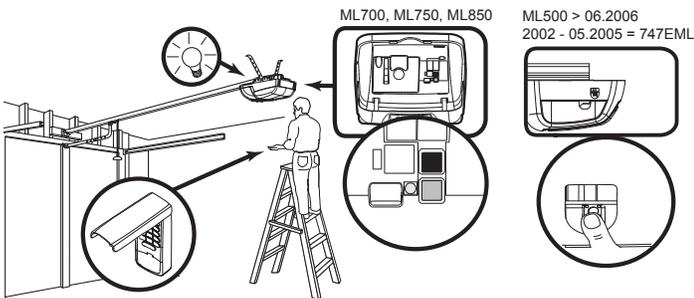

1. Press and release the learn button on motor unit. The learn indicator light will glow steadily for 30 seconds.

2. Within 30 seconds, enter a four digit personal identification number (PIN) of your choice on the keypad. Then press and hold the ENTER button.

  3. Release the button when the motor unit lights blink. It has learned the code.



SETTING THE PERSONAL ENTRY PASSWORD

For ease of set up and testing purposes we advise you enter a PIN that you will remember.

CHANGING YOUR PIN

If your PIN is discovered and needs to be changed, this can be done by following these steps:

1. Enter your current PIN, then press and hold the # button. The opener's courtesy light will blink twice. Release the # button.
2. Enter your new 4-digit PIN, followed by the ENTER button. The motor's courtesy light will blink once when the PIN has been learned. Test by pressing the new PIN, then press ENTER. The door should operate.




To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:


- Install Keyless Entry Control within sight of the garage door, out of reach of children at a minimum height of 1.5 m, and away from all moving parts of door.
- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote control transmitters.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

INSTALLATION


1. Choose a convenient location for installation. Install out of the reach of children at a minimum height of 1.5 m, away from all moving parts of door. For a one-piece door, choose the optional location shown in the illustration to avoid injury as the door swings up and out. Test the reception of the Keyless Entry by operating your opener from the selected location. Change the location if necessary.

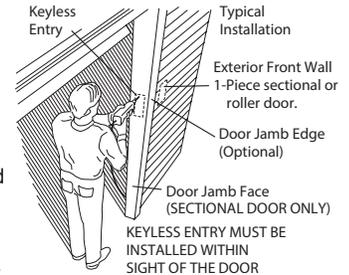

2. Remove the battery cover to access the bottom mounting hole. Slide the cover down to remove. Remove battery.

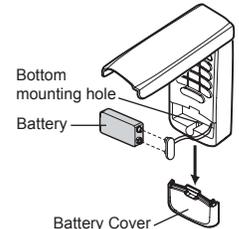


3. Center the keypad at eye level against the selected location. Mark 4-1/4" (10.8 cm) up the centerline from the bottom and drill a 1/8" (3.2 mm) pilot hole. Install top mounting screw, allowing 1/8" (3.2 mm) to protrude above surface. Position keypad on screw head and adjust for snug fit. With cover open so bottom mounting hole is visible, Mark the position of the hole. Remove keypad and drill 1/8" (3.2 mm) pilot hole. Replace keypad and complete installation with bottom screw, using care to avoid cracking plastic housing. Do not over tighten. Reinstall battery and replace the battery cover. To replace battery cover slide up and snap it into place.

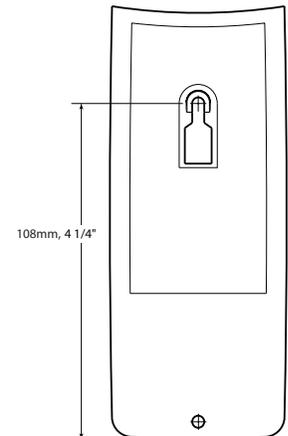

The Keyless Entry Battery

The battery should produce power for at least one year. Replace when the Keyless Entry illumination becomes dim or it doesn't stay on after a keystroke. Dispose of old battery properly.

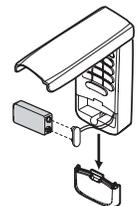

To prevent possible **SERIOUS INJURY** or **DEATH**:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

CHAMBERLAIN®

ONE YEAR LIMITED WARRANTY

Chamberlain Australia Pty Limited / Chamberlain New Zealand (Chamberlain), the manufacturer of Chamberlain® automatic garage door openers, warrants to the original consumer purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.

Chamberlain is committed to manufacturing and supplying high quality goods. As part of this commitment, we seek to provide reliable service and support for our goods and are pleased to provide you, the original purchaser, with this Chamberlain Limited Warranty. The benefits given to you under this Chamberlain Limited Warranty are in addition to any rights and remedies that you may have under Australian or New Zealand consumer protection laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or New Zealand Consumer Guarantees Act 1993. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Chamberlain Australia
7-9 Orion Road
Lane Cove NSW 2066

Chamberlain NZ New Zealand
P.O. Box 100-221
North Shore 0745

chamberlaindiy.com.au
chamberlaindiy.co.nz

