



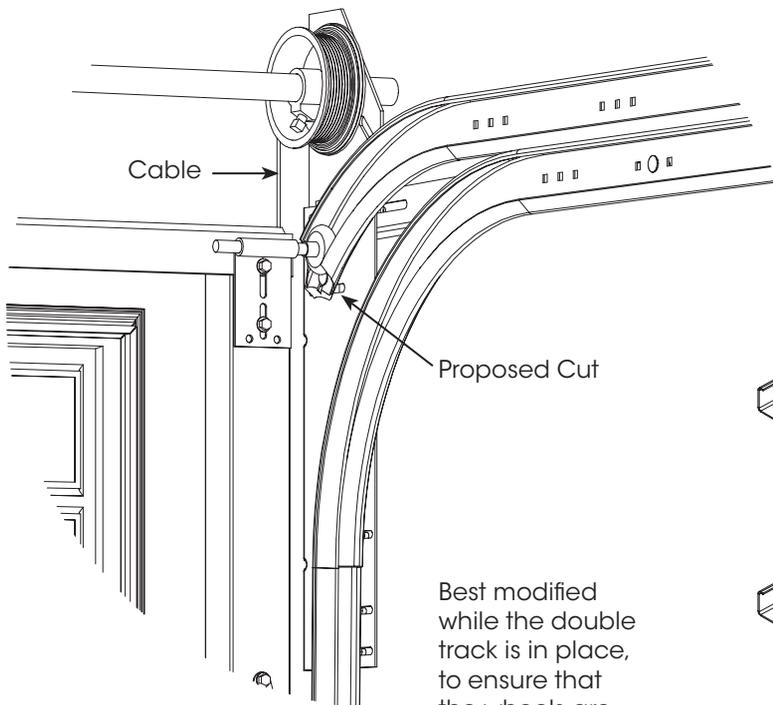


Front Mounted Low Headroom Double Track Independent Torsion

installation instructions (for 250mm minimum headroom)

The kit will be supplied with two parts that need to be modified slightly on site as indicated following. Otherwise the overall configuration is straight forward as shown below.

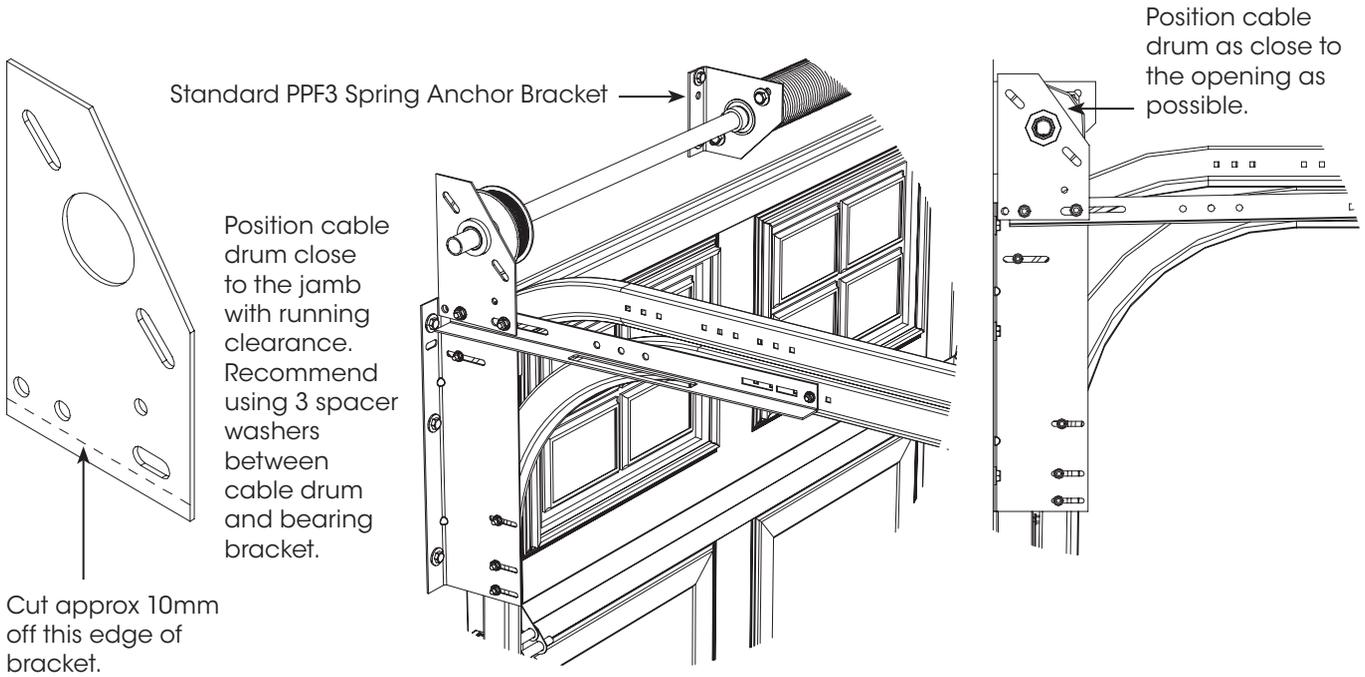

The top track curve needs to be 'trimmed' so as not to interfere with the cable during operation but still firmly retains the trolley wheel. A suitable cut can be shown below.

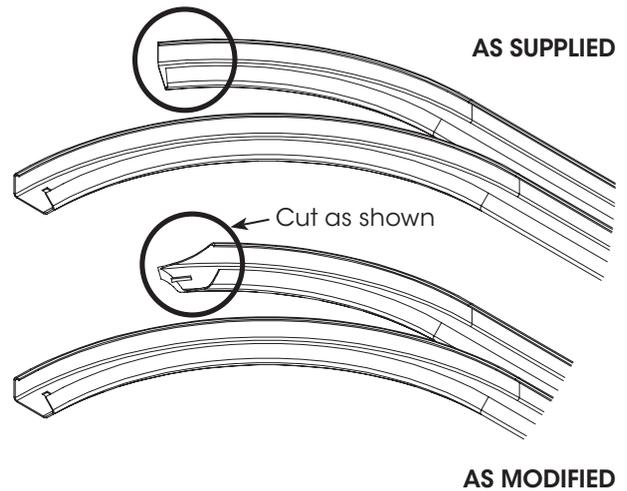

Best modified while the double track is in place, to ensure that the wheels are retained.

